

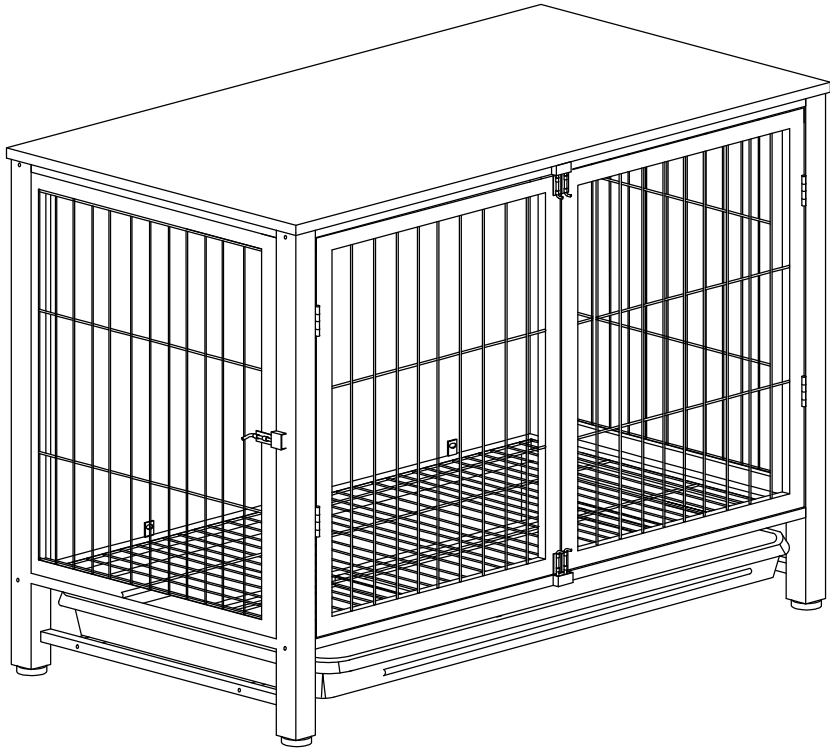







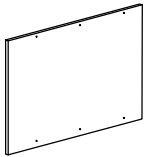







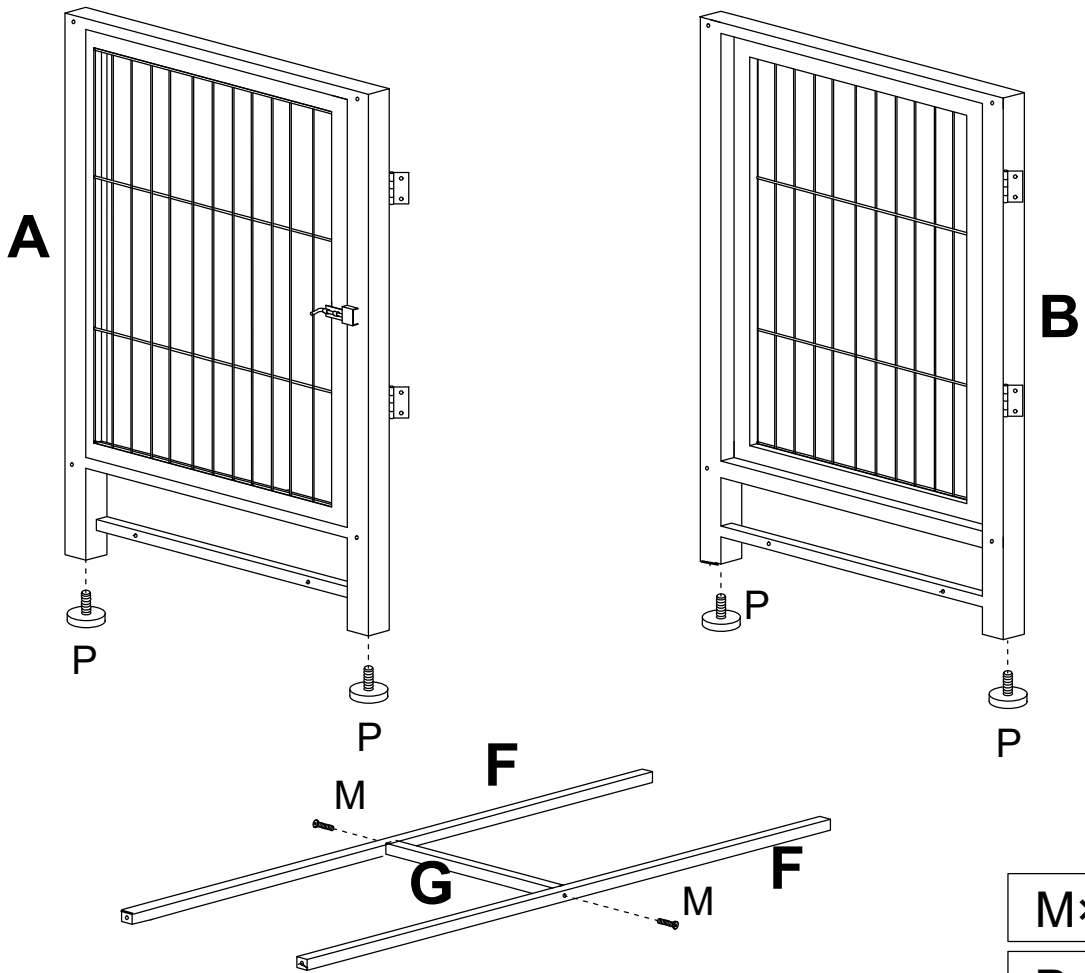


ASSEMBLY INSTRUCTION



					
A×1PC	B×1PC	C×1PC	D×1PC	E×1PC	F×2PCS
					 M6×12mm L×12PCS
G×1PC	H×2PCS	I×1PC	J×1PC	K×1PC	
					
M6×35mm M×6PCS	M6×50mm N×8PCS	M4×12mm O×8PCS	P×4PCS	Q×1PC	


Step 1



M×2PCS


P×4PCS

Step 2

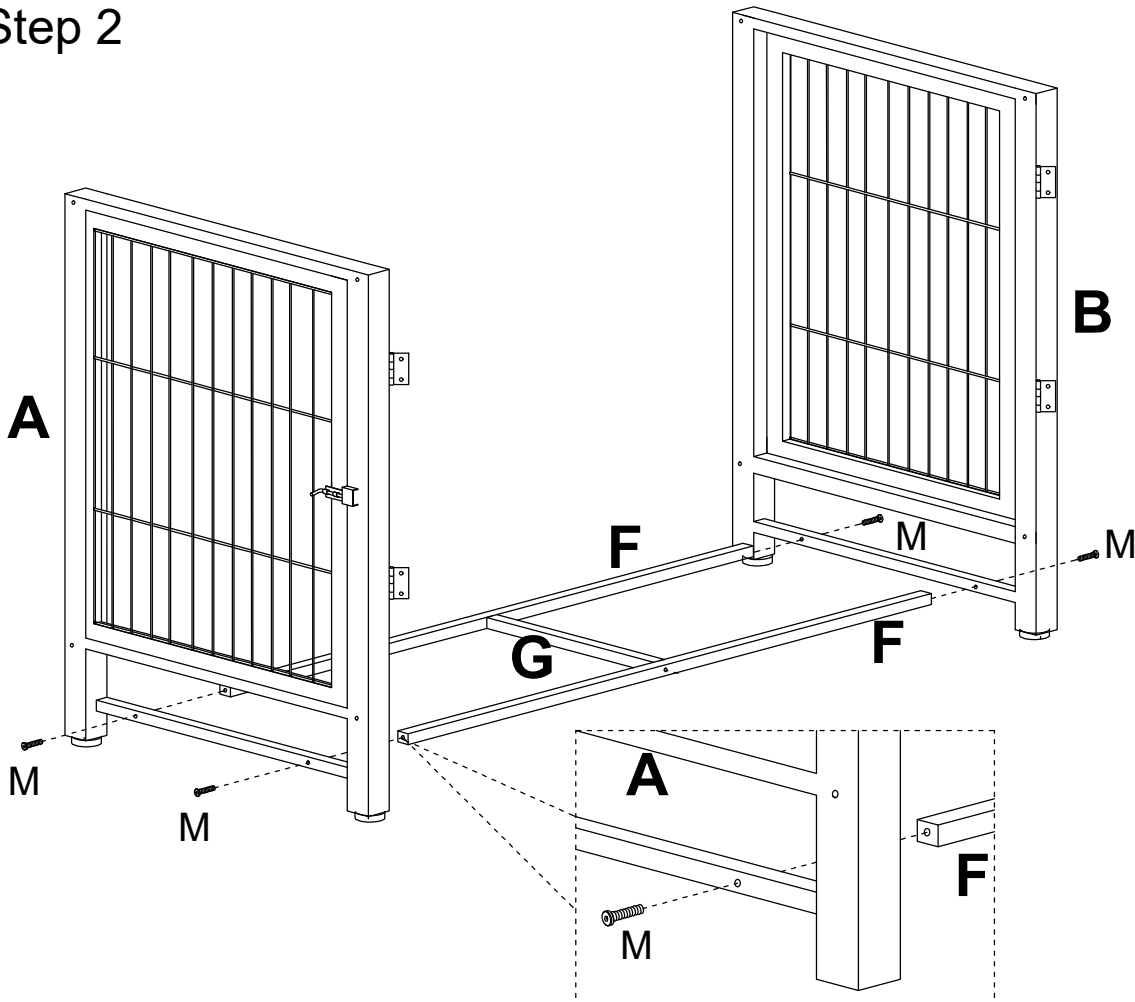

M×4PCS


Step 3

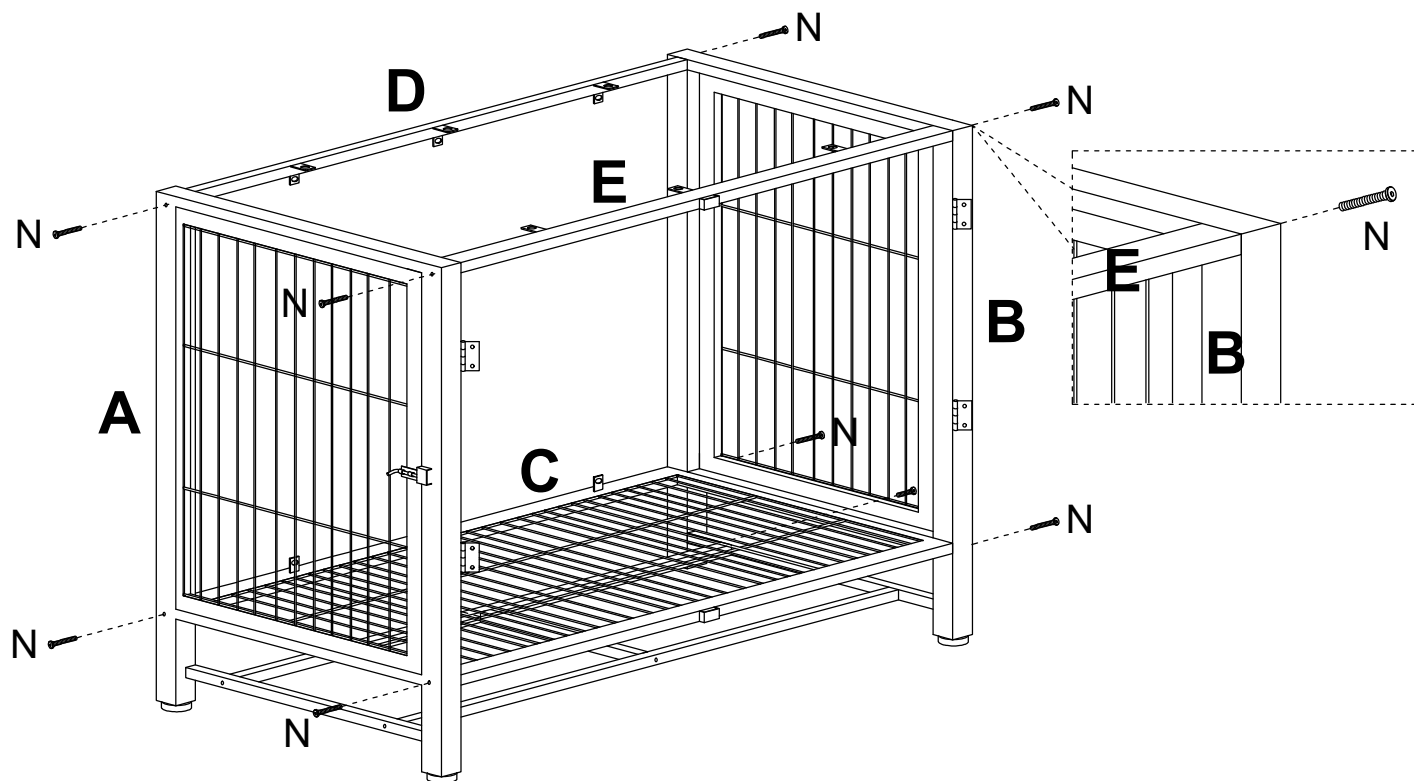

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

N×8PCS


Step 4

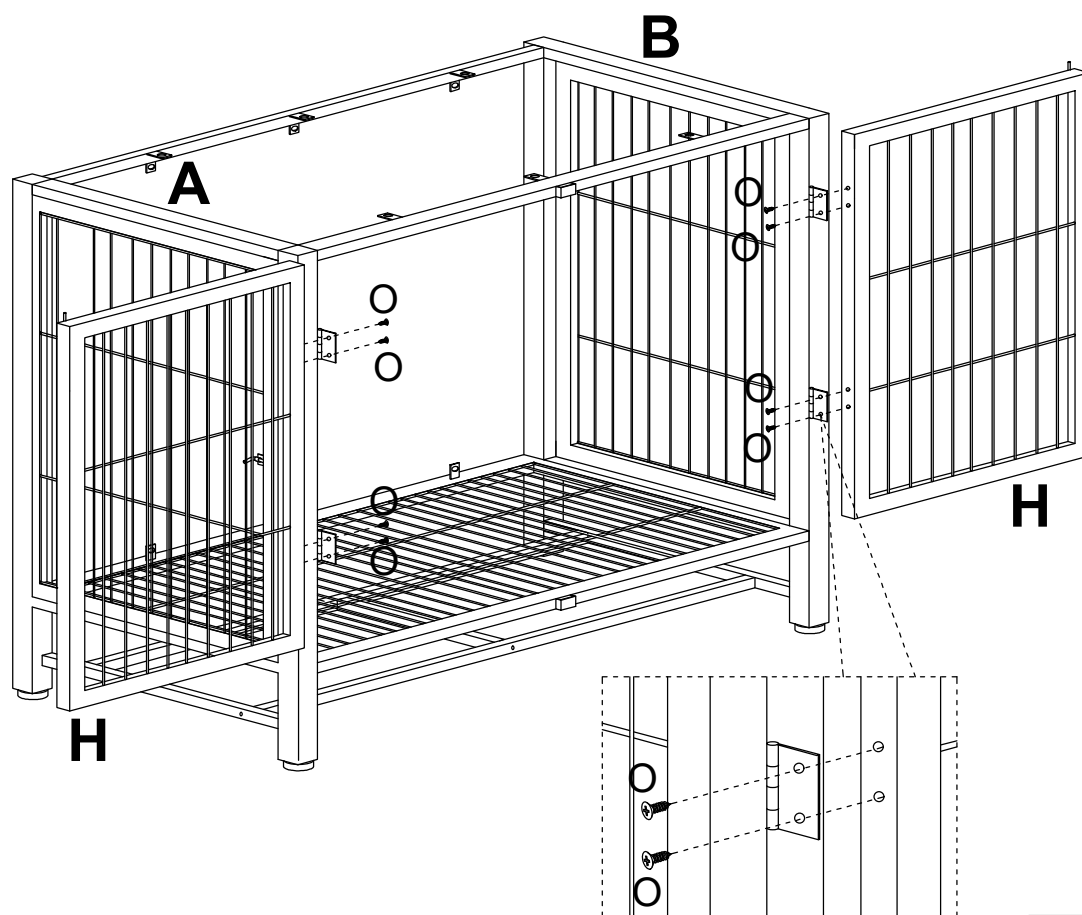

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


O×8PCS

Step 5

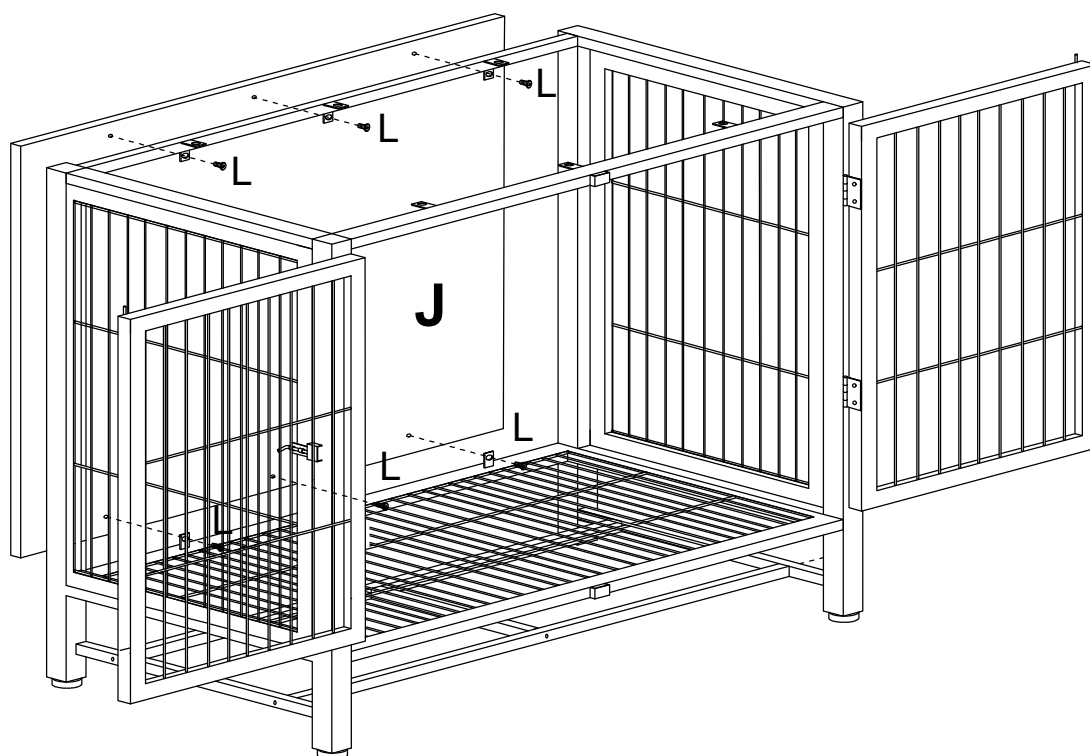


L×6PCS

Step 6

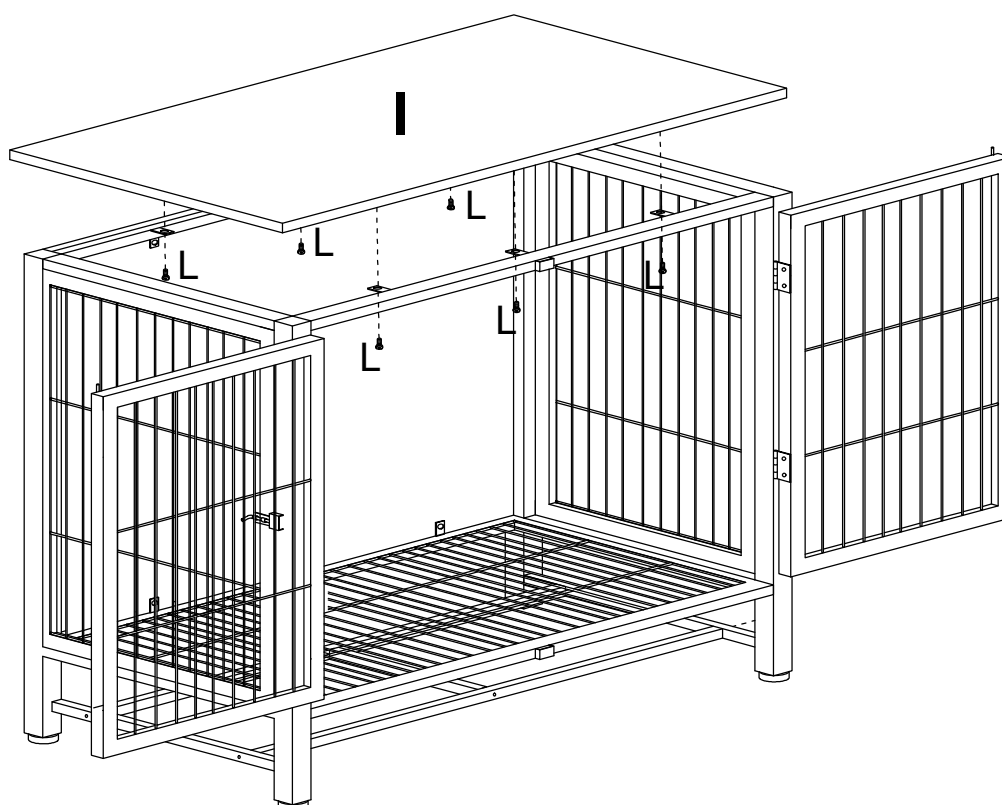

L×6PCS

Step 7

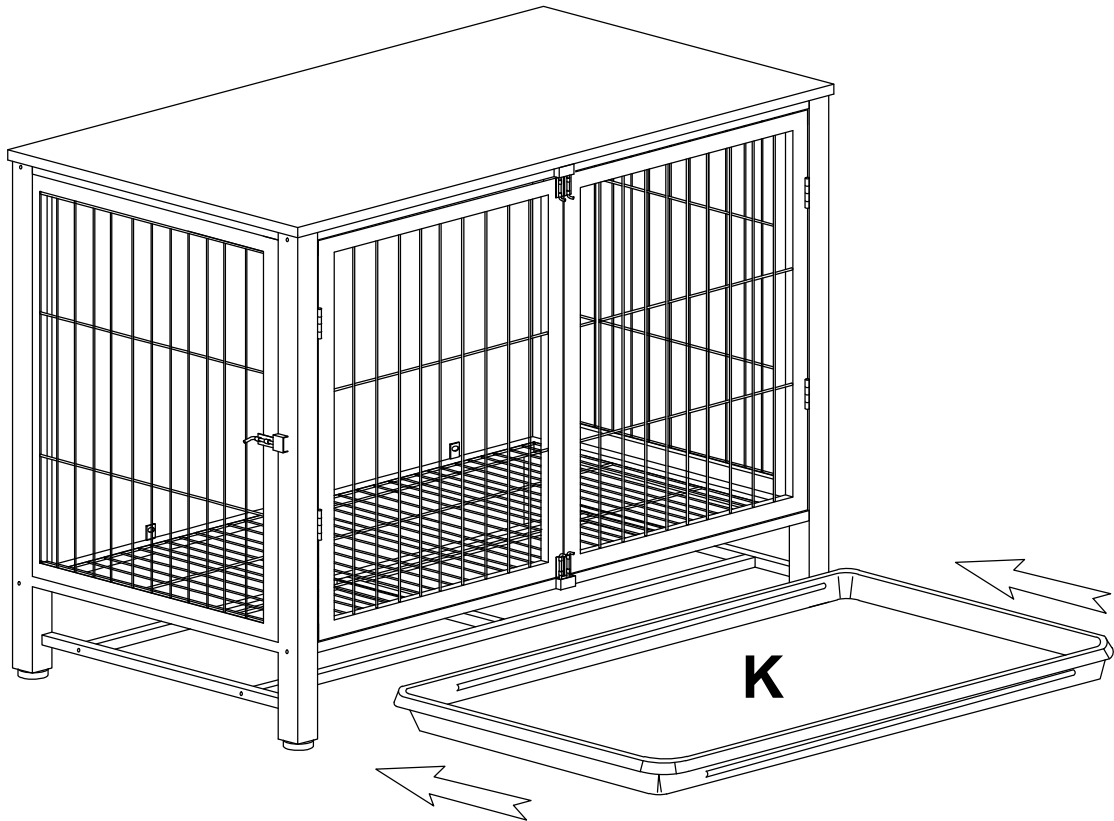

Step 8

