






























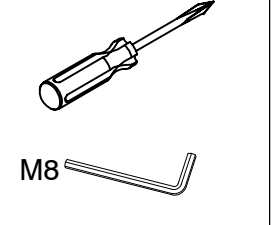
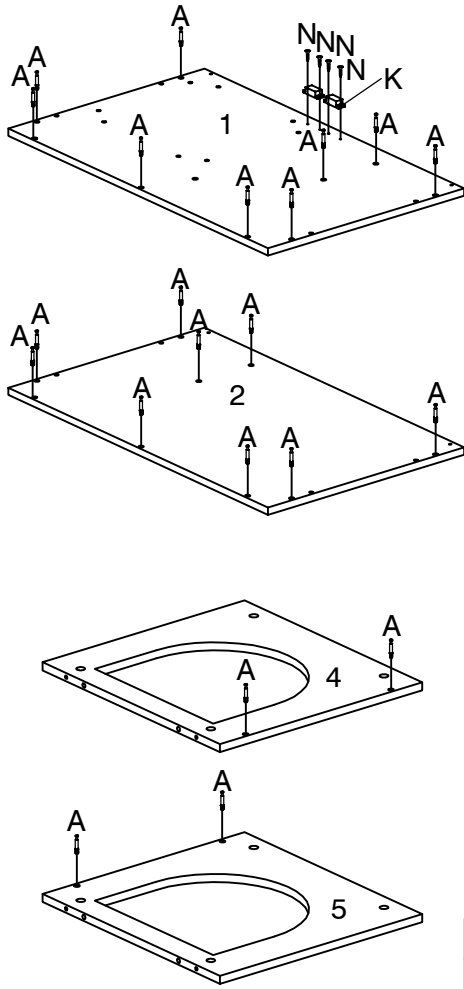


Assembling Instruction


Attention: Do not tighten the screws until all of them are in right positions

1  x1	2  x1	3  x1		
4  x1	5  x1	6  x1		
7  x1	8  x1	9  x1		
10  x1	11  x2	12  x1		
13  x1	14  x1	15  x1	16  x1	
17  x1	A  x38	B  M8x30 x2	C  M8x60 x1	D  M8x35 x2
E  M8x40 x8	F  M4x14 x6	G  M3x12 x4	H  M4x20 x2	I  M5x40 x8
J  x2	K  x2	L  x4	N  M3.5x14 x4	M  x6
				 M8




1

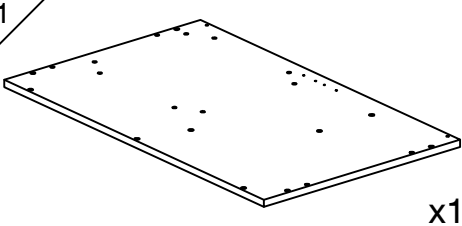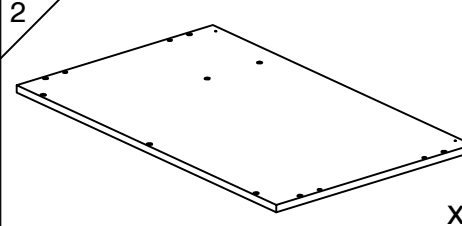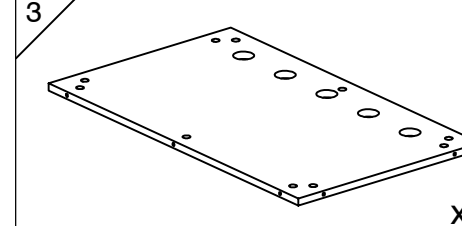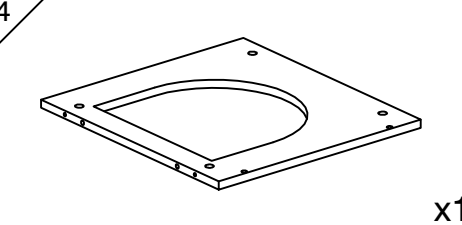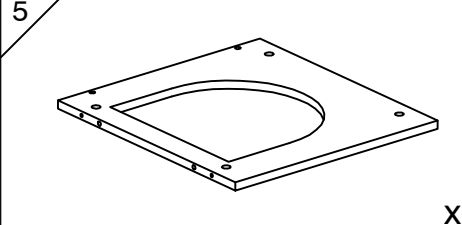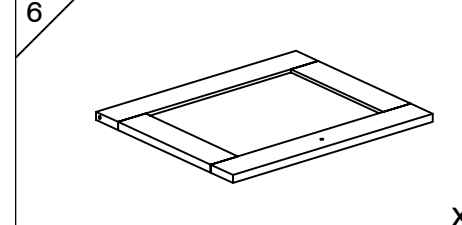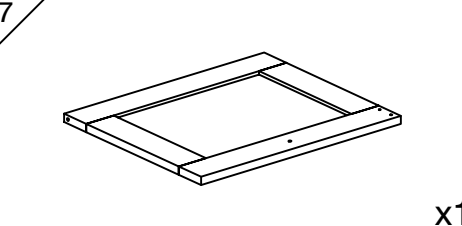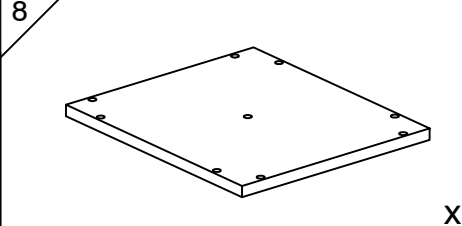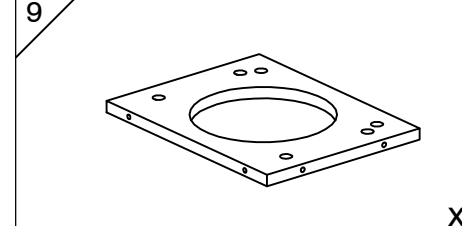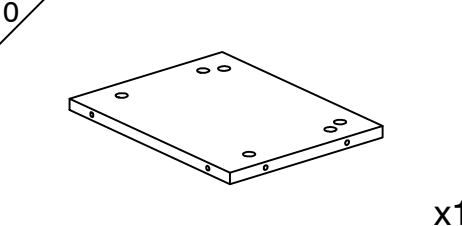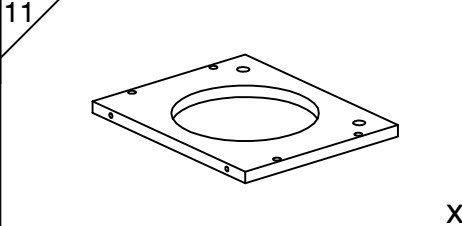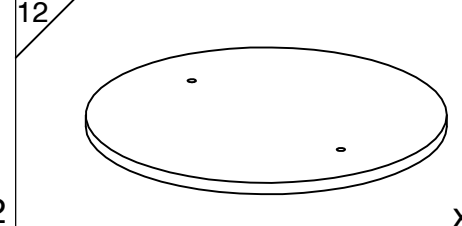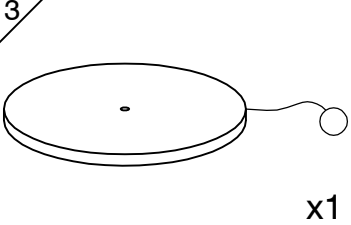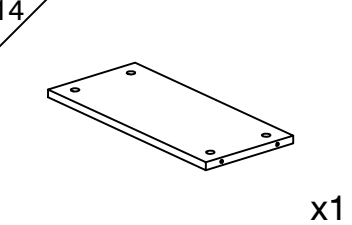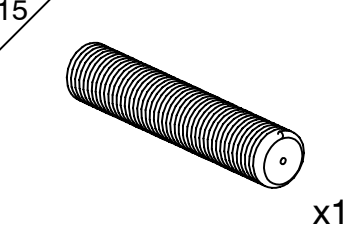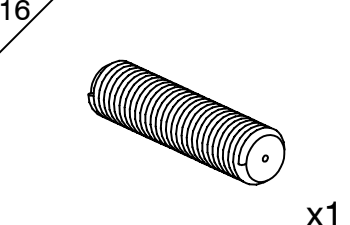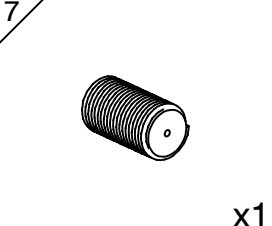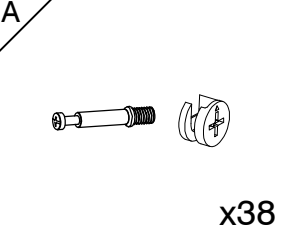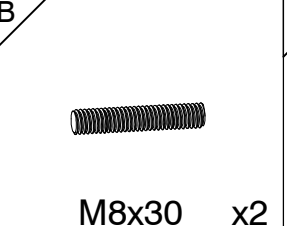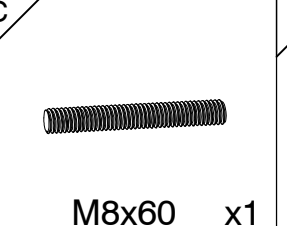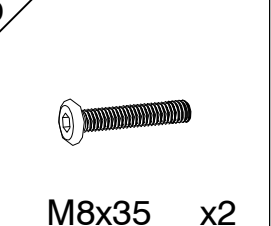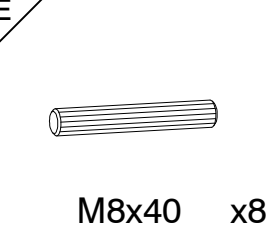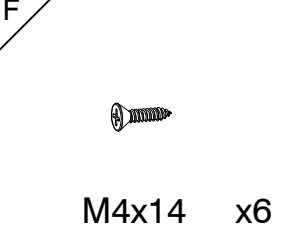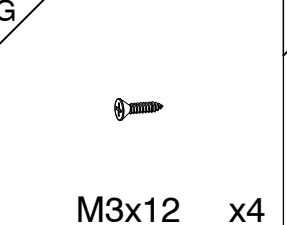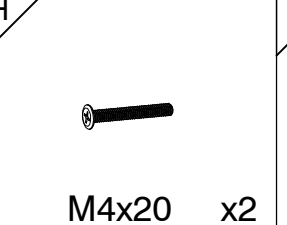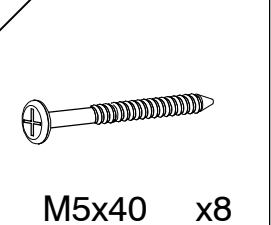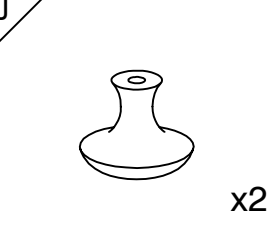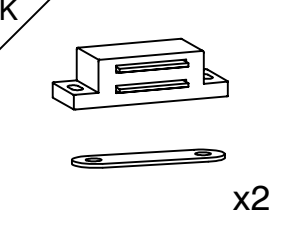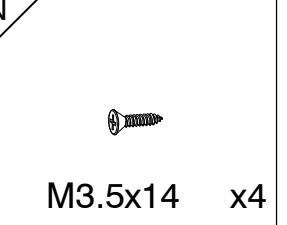


2

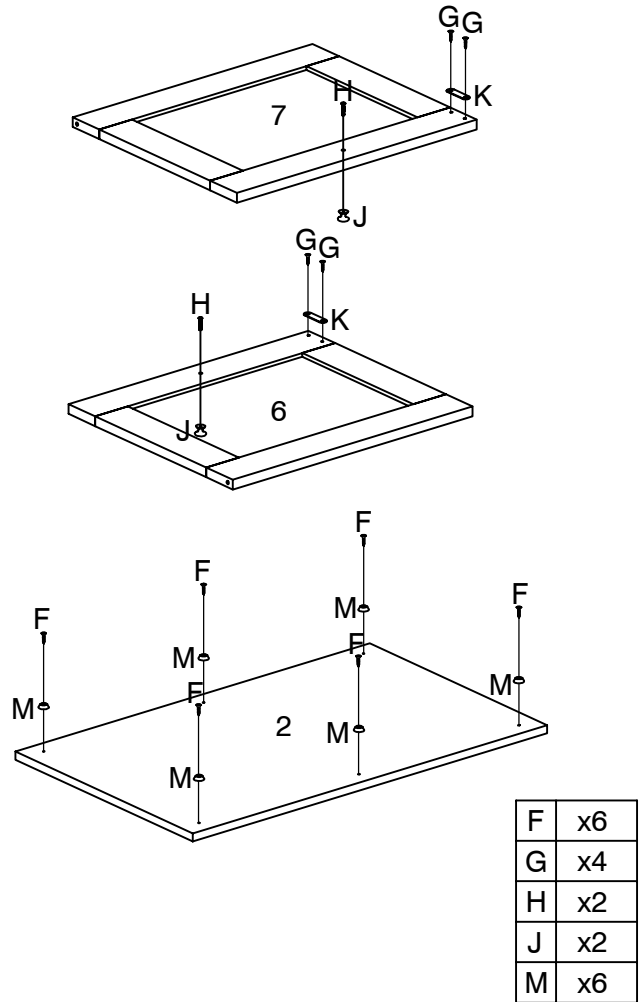

3

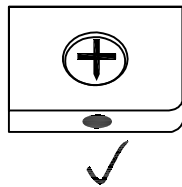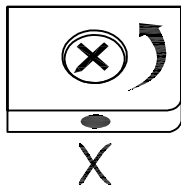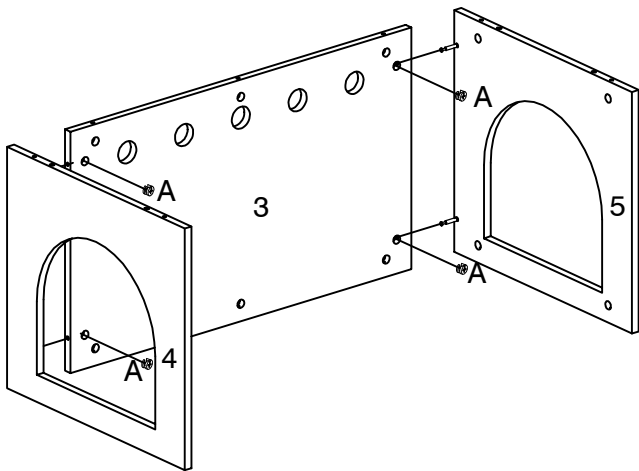


4

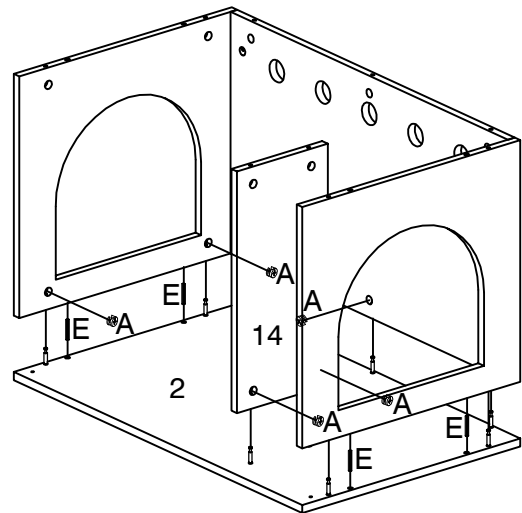



E	x4
---	----

5

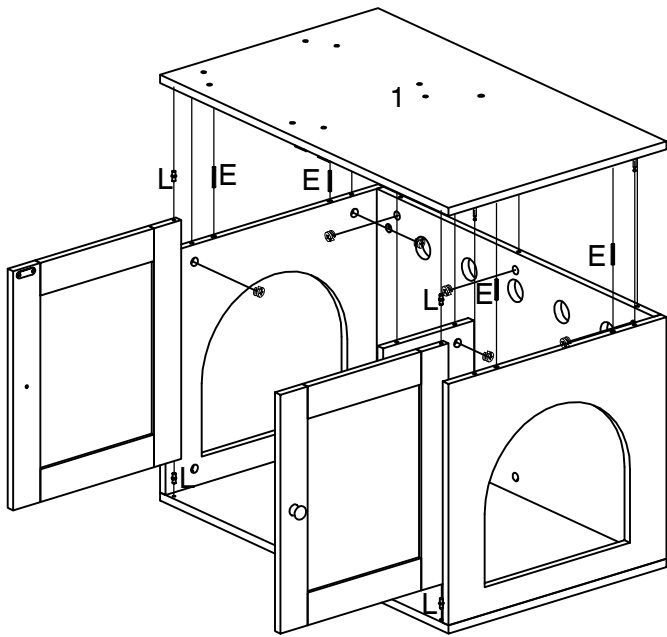

E	x4
L	x4


6

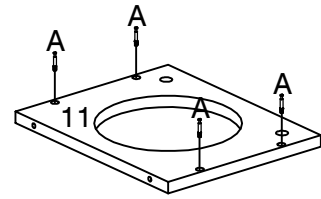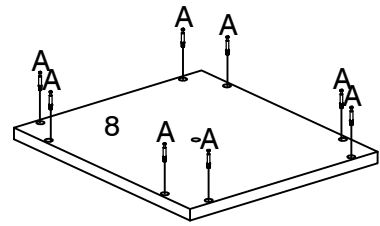


x2

A	x16
---	-----


7

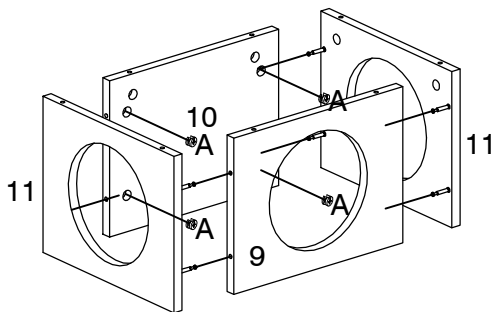

8

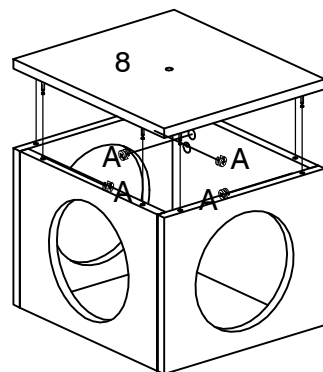


9

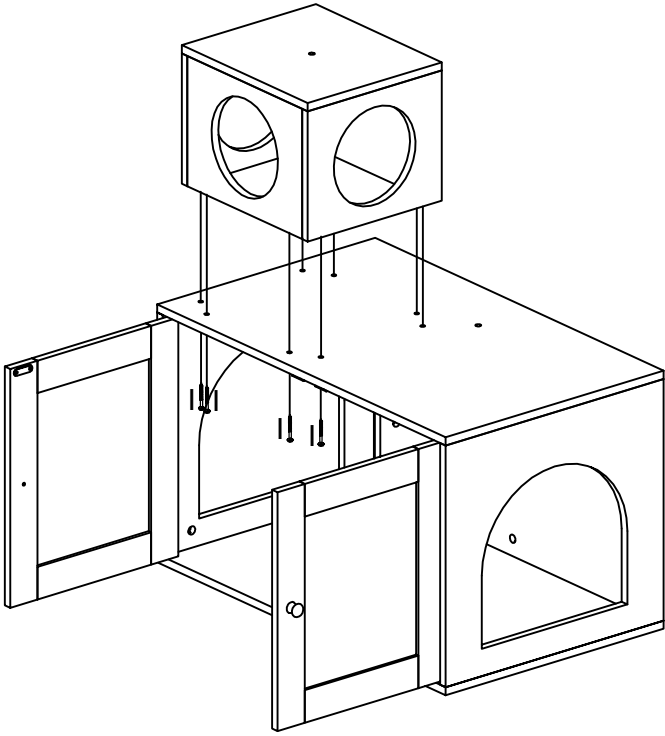


I x8

10

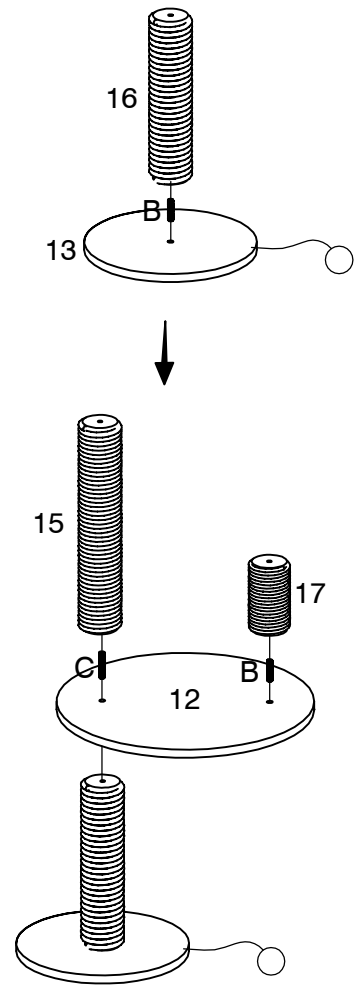

B	x2
C	x1

11

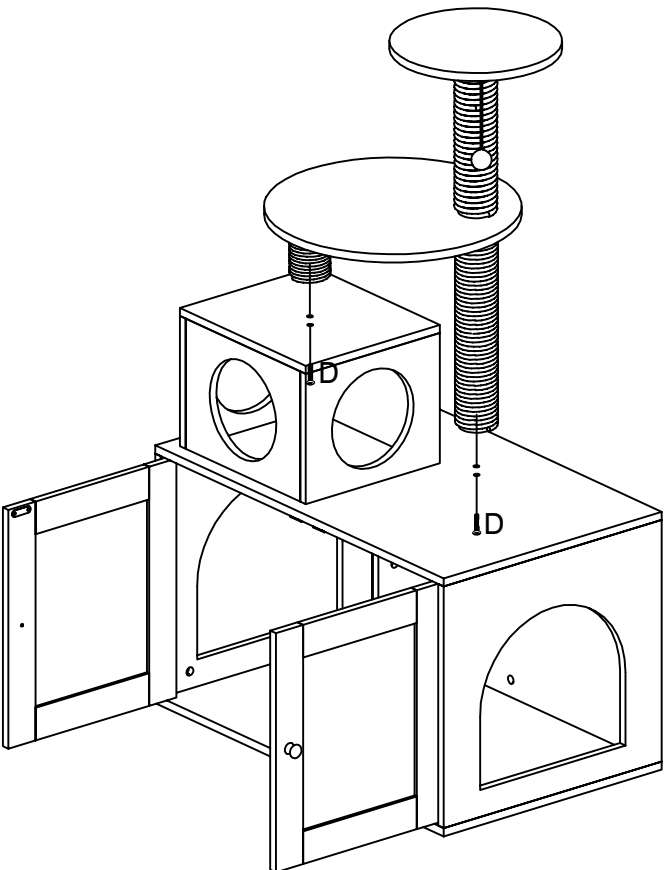

D x2

12

